


Product 654857

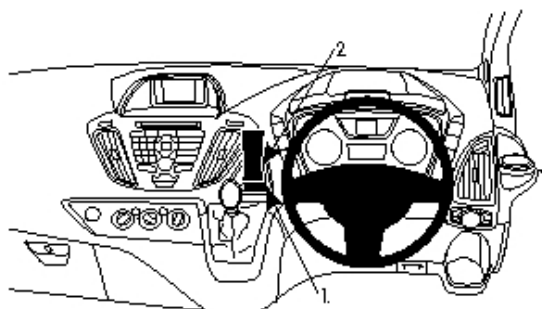

654857 ProClip

Center mount

The ProClip is a mounting bracket for the vehicle's dashboard. Onto the ProClip you can install e.g. a holder for your mobile phone or PDA or a handsfree set etc. Safe and convenient -always within easy reach. The ProClip is car specific and easy to install. The installation is quick, no special tools or dismantle of the dashboard is required and it will not damage the interior of the vehicle. Made in black ABS plastic. Comes with detailed instructions.

EAN: 7320286548571

Item no 654857 fits:

- Ford Tourneo Custom 13-15 (For all countries)
- Ford Transit 14-15 (For all countries)
- Ford Transit Custom 13-15 (For all countries)
- Ford Transit Tourneo 14-15 (For all countries)

INSTALLATION INSTRUCTIONS

1.



2.



3.



4.



Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Peel off the adhesive tape covers on the ProClip. Press the angled edge on the lower part of the ProClip into the gap between the compartment and the surrounding frame.
 2. Pull the lower part of the ProClip toward you so the angled edge hooks properly around the frame surrounding the compartment.
 3. Press downward on top of the ProClip so the angled upper edge hooks under the frame surrounding the compartment.
 4. The ProClip is in place.
-